

Advantech AE Technical Share Document


Date	2018 / 10 / 25	Release Note	<input checked="" type="checkbox"/> Internal <input type="checkbox"/> External
Category	<input type="checkbox"/> FAQ <input checked="" type="checkbox"/> SOP	Related OS	Windows
Abstract	How to update BIOS under Windows OS		
Keyword	AIM35, AIM55, AIM65, AIM38, AIM58, AIM68		
Related Product			

■ Description: This SOP will guide you to flash BIOS under Windows OS

■ Preparation:

<p>1. USB Disk (with BIOS file .exe)</p> 	<p>2. Micro USB to USB Female (OTG cable) (If AIMx8 series, no need this cable)</p> 
---	---

Step 1: Copy BIOS files to a USB drive

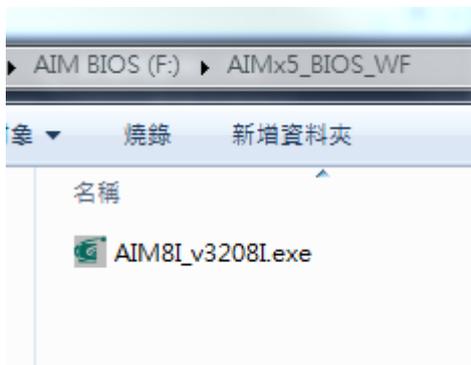

Step 2: Copy .exe file to Desktop and execute it.


(Please make sure AC adapter is plugged in and battery is over 20%)



Step 3: Please check below warning. When the program is running

- 1. Do not put the system into standby or hibernation**
- 2. Do not launch other applications**
- 3. Do not press Power button, open/close LID, dock/undock system, insert or remove USB, 1394 or any other device**

Then, press "OK"

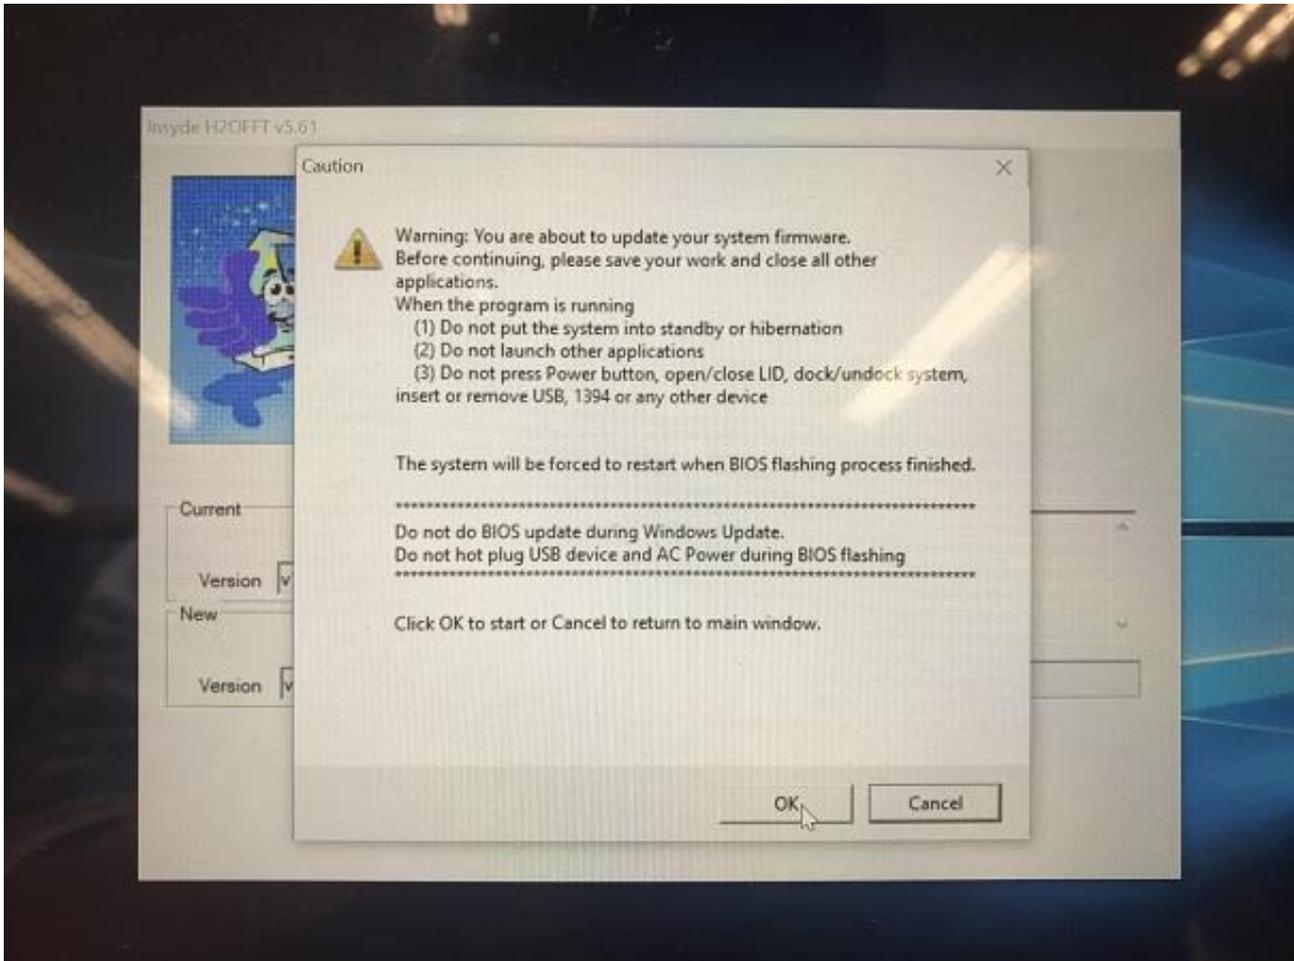

Step 4: Wait for the procedure finished.

Step 5: After flash BIOS is done, ths system will reboot.

