

# **Startup Manual**

### **Packing List**

Before installation, please ensure that the following items have been included in your shipment:

1. ECU-1051 Product

#### Overview

For distributed equipment management and maintenance, ECU-1051TL playing as data publish gateway from site to Cloud. The operation temperature range is -40~70°C. This module is extremely cost-effective solution for industrial measurement and monitoring applications.



Figure 1. Product Overview

## **Specifications**

Technical Specification of ECU-1051				
Mounting	Wall-Mount/ DIN-Rail			
Power Requirements	10~30 VDC			
Ethernet Ports	2 x 10/100 Base-T RJ-45 ports			
Serial Ports	2 x RS232 / RS 485			
Indicators	Power, LAN(LINK, ACT), Programmable			
Watchdog	Built-in Hardware & Software			
Storage	NAND Flash/ 512MB for System Image 1 x Micro SD slot for Data			
Power Consumption	2.4W @ 24VDC			
Operation Temp.	-40 ~ 70 ℃			
Warranty	2 years			

For more information on this and other Advantech products, please visit our website at

#### http://www.advantech.com

#### http://www.advantech.com/Products

For technical support and service, please visit our support website at

# http://support.advantech.com.tw/support/default.aspx

This manual is for ECU-1051.

Part No. 2043105100 Edition 1 May 2019 Printed in Taiwan

# Dimensions: (Unit: mm)

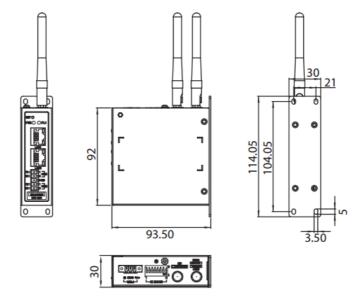


Figure 2. Dimension

# **Power Supply Wiring**

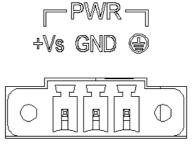


Figure 3. Power Supply

Pin Definition	Description
+Vs	PWR V+ DC power input
GND	PWR V- DC power input
<b>(</b>	GND

# **Communication PIN Assignments**

RS-232/485 Serial Ports (Pin Assignments)					
Pins	1	2	C-GND		
RS-232	Tx	Rx	GND		
RS-485	Data+	Data-	GND		

# **Jumper Setting**

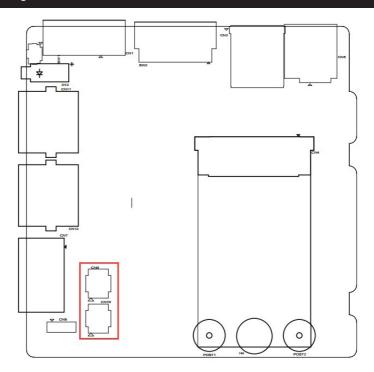


Figure 4. Jumper Location

Serial Ports (RS232/RS485)	CN9(COM1) / CN10(COM2)			
RS232 mode	(3-5)	(4-6)		
RS485 mode, No Terminator	(1-3)	(2-4)	Default	

## Installation

#### 1. Wall Mount

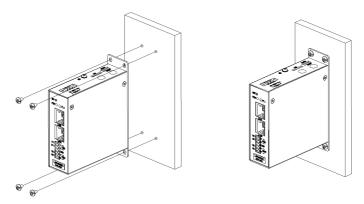


Figure 5. Wall Mount installation

#### 2. DIN-Rail.

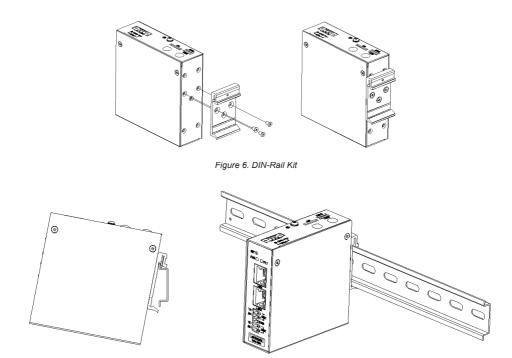


Figure 7. DIN-Rail installation

## Installation (Cont.)

#### 3. Wireless module & Antenna

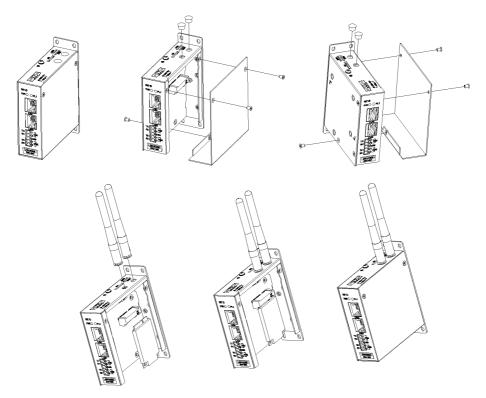


Figure 8. module & antenna installation

### **Software and User Manual**

The WISE-PaaS/EdgeLink Studio is for completing ECU-1000TL and its I/O configuration and management. The PC operation system is Windows XP/Windows 7. The software installation package as well as user's manual can be acquired from the following path: http://www.advantech.com/