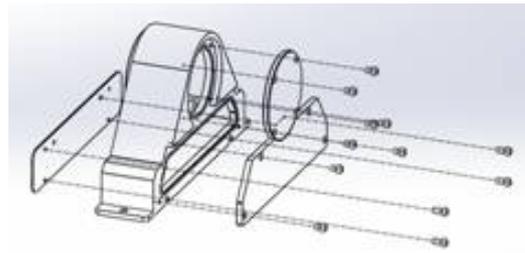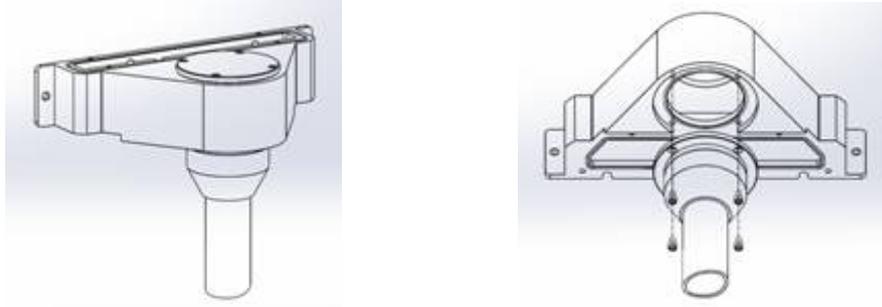# IPPC-5211WS-EMKE Flange Adapter Installation Guide

Below are instructions for assembling standard product to Advantech's
flange adapter in IPPC-5xx1WS series products.
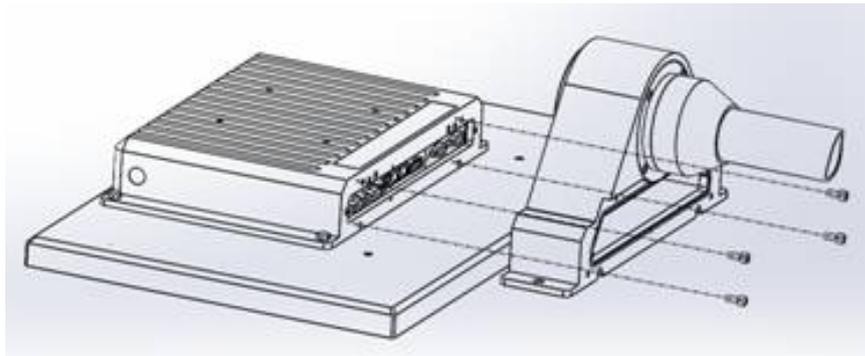
This example is from IPPC-5211WS.

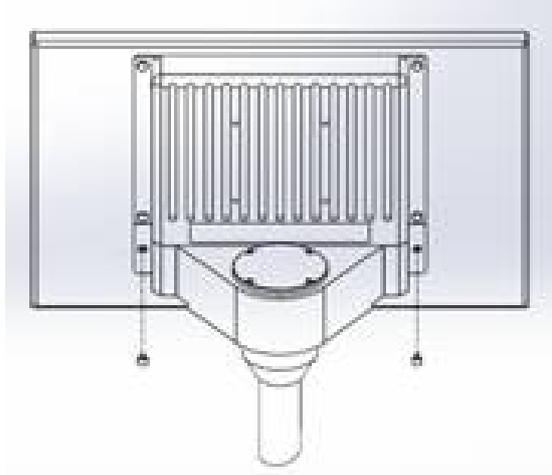1. Taking the flange adapter from the product assembly box.

2. Using four screws to fasten the flange adapter to the metal tube.
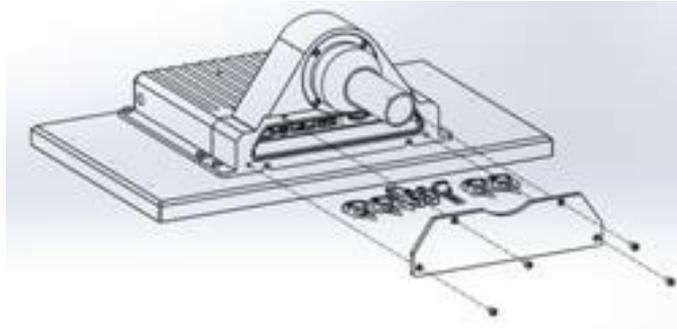

3. Taking the PC product from the product box and fasten the PC product to the
    flange adapter.

4. Using two screws to fasten the PC product to the flange adapter.

5. Assembling cable and using four screws to fasten the cover sheet of flange adapter.

6. After locking the screws, installation is complete.